



Pulliam Pools
Innovating Since 1916

HOW TO WINTERIZE YOUR OZONE SYSTEM





Pulliam Pools

Innovating Since 1916

HOW TO WINTERIZE YOUR OZONE SYSTEM

1

STEP 1

Turn off all power in the breaker box located at the pool equipment.

2

STEP 2

Turn inlet ball valve and outlet ball valve off (typically blue or red handles)

3

STEP 3

Open ozone drain line system spigot (this will drain any standing water in the ozone system)


STEP 1

Turn off all breakers at pool equipment.



STEP 2

Turn both inlet ball valve and outlet ball valve off
(typically blue, red, or grey handles)

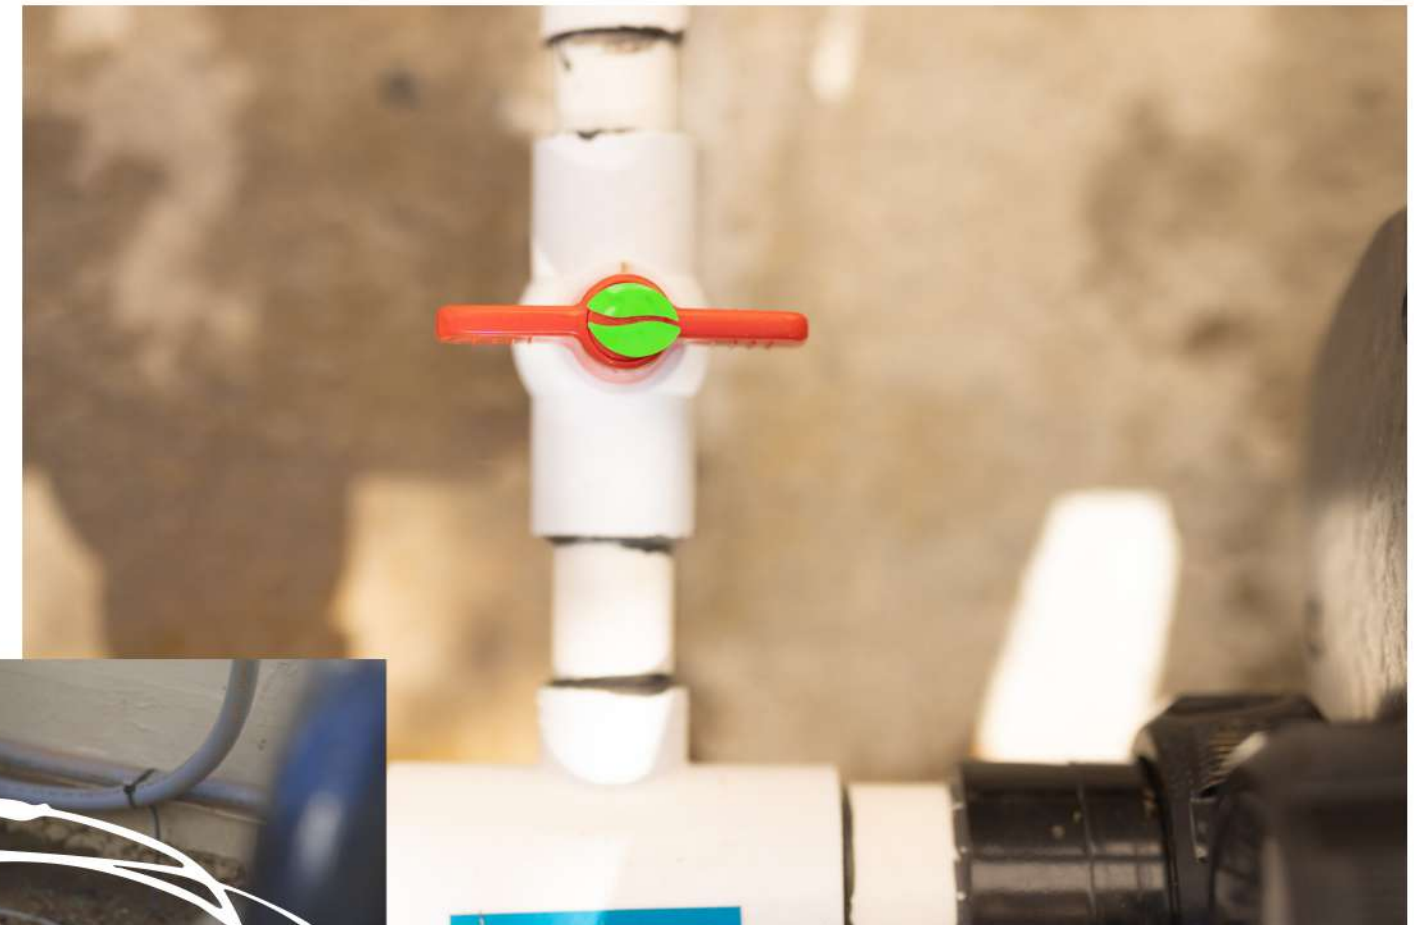

STEP 3

Open both ozone drain line system spigots
(this will drain any standing water in the ozone system)





Pulliam Pools
Innovating Since 1916

PULLIAM.COM



WINTERIZING YOUR OZONE SYSTEM